

Adaptive Toys for Families

3-D Foam Fan

594235 AT

NPI Enabling Devices & Toys
This soft bear fan provides a gentle breeze when activated. Small enough to sit on a table, wheelchair tray, or lap tray. (Switch not included, order separately). Requires 1/8" plug. Two (2) AA batteries included, do not use rechargeable batteries.

Tactile Stimulation; Visual Stimulation

All That Glitters

594250 AT

NPI Enabling Devices & Toys
A multi-dome activity center. The slightest pressure on any corner will reward the user with lights, vibration, music, and flying beads and glitter. Four (4) C batteries included, do not use rechargeable batteries. User's guide.

Tactile Stimulation; Auditory Stimulation; Visual Stimulation

Arcade Ball Zone

594259 AT

A Achievement Products Inc.
Arcade Ball Zone play structure. No batteries needed. For use by therapists with children ages 3+

Visual Stimulation; Tactile Stimulation; Mobility; Gross Motor Movement

Baby Brontosaurus

594211 AT

NPI Enabling Devices & Toys
This prehistoric pal marches along until he is ready to announce his presence. Requires 1/8" plug. (Switch not included, order separately). Two (2) AA batteries included, do not use rechargeable batteries.

Tactile Stimulation; Auditory Stimulation; Visual Stimulation

Battery Interrupter Kit

594216 AT

A Enabling Devices & Toys
A toy modifier that turns any momentary switch into an on/off or timed switch. Can be used with any battery operated device or adapted device requiring 1/8" plug. Comes with puppy fan. 9-Volt battery for interrupter included, do not use rechargeable batteries. User's guide.

Cause and Effect; Gross Motor Movement; Eye-Hand Coordination

Big Buddy Switch

594258 AT

NPI Achievement Products Inc.
Touch activation switch. Comes with 1/8" jack. No batteries needed.

Gross Motor Movement; Eye-Hand Coordination

Big Red Switch

594232 AT

NPI Enabling Devices & Toys
Push gently on top of switch and you will be rewarded with light and vibration. Plug the switch into your favorite toy and it will activate when the switch is pressed. Comes with 1/8 to 1/8" jack. Two (2) AA batteries included, do not use rechargeable batteries. Teacher's guide.

Tactile Stimulation; Visual Stimulation

Big Stunt Remote Control Car

594203 AT

PI Enabling Devices & Toys
Remote control car that flips, skips, trips, and hops. Just plug your switches (not included, order separately if needed) into the transmitter and the car goes into action. The transmitter has its own special large joystick for users who do not require a switch. CAUTION: DO NOT USE IN SAND OR WATER. Four (4) AA batteries for car and one (1) 9-Volt battery for transmitter included, do not use rechargeable batteries. Teacher's guide.

Directionality; Auditory Stimulation; Visual Stimulation

Boom Box

594234 AT

PI Enabling Devices & Toys
An AM/FM stereo cassette player adapted to be turned on or off with any switch. (Switch not included, order separately). Requires 1/8" plug. Six (6) D batteries included, do not use rechargeable batteries.

Auditory Stimulation

Butterfly Light and Music Puzzle

594254 AT

NPI Enabling Devices & Toys
This multi-sensory puzzle is equipped with four colorful shapes that fit into four matching removable blocks. As each shape is correctly inserted into its block, a corresponding string of lights on the butterfly's wing begins to flash. When all the shapes are set in place, music plays and the butterfly's eyes light up. The blocks can be shifted. CAUTION: VISUAL STIMULATION MAY CAUSE SEIZURE ACTIVITY. Four (4) C batteries included, do not use rechargeable batteries. User's guide.

Auditory Stimulation; Spatial Relationships; Visual Stimulation

Button Switch

594245 AT

NPI Enabling Devices & Toys
Ideal for developing fine motor skills, helps develop finger isolation. No batteries needed.

Fine Motor Movement; Finger Isolation

Compact Activity Center

594237 AT

NPI Enabling Devices & Toys
A small scale busy box designed to provide stimulation and cognitive activity for children whose physical mobility may be limited due to position needs. The activity center promotes exploratory play; provides visual, auditory, and tactile stimulation; and encourages gross arm movement and eye-hand coordination. Two (2) C batteries included, do not use rechargeable batteries. User's guide.

Visual Stimulation; Auditory Stimulation; Gross Motor Movement; Tactile Stimulation; Eye-Hand Coordination

Dalmatian Chase

594251 AT

NPI Enabling Devices & Toys
Watch the Dalmatians chase and race around this exciting slide toy. Comes with plate switch. Assembly required. One (1) D battery included, do not use rechargeable batteries.

Cause and Effect; Visual Tracking

Deluxe Razzle Dazzle Bead Chain Curtain

594218 AT

NPI Enabling Devices & Toys
The colorful Razzle Dazzle Bead Chain Curtain provides visual, tactile, and auditory stimulation. The bead chain also can be used as a switch, without music, to operate selected toys or devices. Comes with 1/8 to 1/8" cord for activation with separate toy/device. Two (2) AA batteries included, do not use rechargeable batteries. Set up needed by adult. User's guide.

Tactile Stimulation; Auditory Stimulation; Visual Stimulation

Dinos

594785 AT

NP 2001 Innovative Kids
Foam rubber book of dinosaurs with removable cutouts. Each page has different textures on the background and the dinosaur.

Eye-Hand Coordination; Tactile Stimulation

Dora the Explorer

594214 AT

NPI Enabling Devices & Toys
Push the switch and Dora comes to life as she dances and sings the "We Did It" song. She speaks both English and Spanish. Dora can also be activated by pushing her shoelace. Requires 1/8" plug. (Switch not included, order separately). Four (4) AA batteries included, do not use rechargeable batteries.

Visual Stimulation; Auditory Stimulation

Adaptive Toys for Families

Four Tune Music Box

594207 AT

NPI Enabling Devices & Toys

Plug your switches into this music box and hear wonderful melodies while lights flash. Each switch will activate a different tune. (Switches not included, order separately - up to 4 can be used). Four (4) AA batteries included, do not use rechargeable batteries). Teacher's guide.

Auditory Stimulation; Visual Stimulation

Funky Keyboard

594256 AT

NPI Achievement Products Inc.

Create your own music or hear animals sing songs by pressing on different areas of this soft keyboard. CAUTION: VISUAL STIMULATION MAY CAUSE SEIZURE ACTIVITY. Two (2) AA batteries included, do not use rechargeable batteries. For ages 18 months and older.

Gross Motor Movement; Fine Motor Movement; Auditory Stimulation; Tactile Stimulation; Visual Stimulation

Game Boy Adapter (Game Boy Not Included)

594253 AT

IMJ Enabling Devices & Toys

The switch activated Game Boy adapter allows one to two players to utilize the Game Boy Advance SP player with our ability switches. When ordering please request 4 ability switches as seen in photo. Comes with AC adapter for the adapter itself. No batteries needed. User's guide. For ages 7+

Visual Stimulation; Visual Tracking; Eye-Hand Coordination

Glitter Roll Music Box/Switch

594215 AT

NPI Enabling Devices & Toys

The Glitter Roll Music Box/Switch will provide hours of multi-sensory stimulation. When the clear cylinder is rolled, a colorful array of sparkling pompoms and glitter tumbles inside and music plays. This toy can also be used as an external capability switch, without music, when it is connected to a toy or device. Comes with 1/8 to 1/8" cord for activation with 1/8" jacks. Two (2) AA batteries included, do not use rechargeable batteries. User's guide.

Gross Motor Movement; Visual Stimulation; Auditory Stimulation; Tactile Stimulation

Gooshey Switch - With Vibration, Lights, and Music

594246 AT

NPI Enabling Devices & Toys

A durable, soft, sparkly pillow switch which may be converted into three switches: a momentary switch, a vibrating switch, and a lighted, vibrating, musical switch. The lighted vibrating musical switch has a special control which allows the user to select any or all of the sensory modalities. This unit can also be used alone as a sensory toy. Comes with 1/8 to 1/8" cord for activation with 1/8" jacks. Set up needed by adult for use with other toys. Two (2) AA batteries included, do not use rechargeable batteries. User's guide.

Tactile Stimulation; Auditory Stimulation; Visual Stimulation

Interchangeable Music Puzzle/Switch

594248 AT

NPI Enabling Devices & Toys

This puzzle has removable blocks which allow the child to progressively increase the skill required to complete the task. Start with one shape and build up to five. When the task is complete, music plays. If a toy or device is connected to the blocks, it will automatically turn on. One (1) AA battery included, do not use rechargeable batteries. User's guide. For ages 3+

Cognitive Development; Spatial Relationships; Auditory Stimulation; Eye-Hand Coordination

Joy Stick Switch

594236 AT

NPI Enabling Devices & Toys

The joystick teaches directionality as well as other spatial relationships. This switch enables the activation of four different toys or devices, depending on the direction in which the stick is moved. Comes with four 1/8 to 1/8" cords for activation with 1/8" jacks. Batteries not needed. User's guide.

Directionality; Spatial Relationships; Cognitive Development

Jumpy Crab

594209 AT

NPI Enabling Devices & Toys

Jumpy Crab is activated by sound. Giggle, clap hands, or make any small noise to start him jumping and bouncing. (Switch not required). Two (2) AA batteries included, do not use rechargeable batteries.

Tactile Stimulation; Communication; Auditory Stimulation; Visual Stimulation

Lil' Lady Bug

594206 AT

NPI Enabling Devices & Toys

Plays music and crawls across the floor when you activate your switch or push on its back. (Switches not included, order separately). Two (2) AA batteries included, do not use rechargeable batteries. User's guide.

Auditory Stimulation; Tactile Stimulation; Visual Stimulation

Marvin the Mule

594213 AT

NPI Enabling Devices & Toys

Marvin walks, stands, opens his mouth, and moves his ears back and forth. Requires 1/8" plug. (Switch not included, order separately). Two (2) C batteries included, do not use rechargeable batteries.

Visual Stimulation; Tactile Stimulation; Auditory Stimulation

Mini Fan

594255 AT

NPI Achievement Products Inc.

Adjustable mini fan. Either 1/4" plug switch or adapter needed. Two (2) D batteries included, do not use rechargeable batteries.

Tactile Stimulation

Mini Saucer Switch

594244 AT

NPI Enabling Devices & Toys

Designed for individuals who are unable to control the hand or wrist movements necessary to operate traditional plate switches. Comes with 1/8" plug. Batteries not needed. User's guide.

Gross Motor Movement

Piano Stepper

594217 AT

PI Enabling Devices & Toys

The Piano Stepper is a floor based toy made from a foam material containing latex. After building a keyboard from 16 brightly colored jigsaw pieces, your child can make music using his/her hands and feet. The Piano Stepper encourages mobility and gross motor movements. CAUTION: SMALL PARTS INCLUDED AND POSSIBLE LATEX ADDITIVES. Two (2) AA batteries included, do not use rechargeable batteries. Children should have adult supervision.

Gross Motor Movement; Mobility; Auditory Stimulation

Pillow Switch

594257 AT

NPI Achievement Products Inc.

Soft switch for individuals with limited head and limb movements. Comes with 1/8" jack. No batteries needed.

Tactile Stimulation

Adaptive Toys for Families

Pinch Switch

594243 AT

NPI Enabling Devices & Toys
This versatile switch is small enough to be held in a child's hand. Activated by the slightest pressure. Batteries not needed. User's guide. For ages 3+

Fine Motor Movement

Pudgy Piglet

594208 AT

NPI Enabling Devices & Toys
Pudgy walks, wags his tail, wrinkles his nose, and oinks-oinks to his heart's content. Requires 1/8" plug. (Switch not included, order separately). Two (2) C batteries included, do not use rechargeable batteries.

Tactile Stimulation; Visual Stimulation; Auditory Stimulation

Rikki Rooster

594189 AT

NPI Enabling Devices & Toys
Rooster that walks and crows. Requires 1/8" stereo plug. Request appropriate switch for child. 2 AA batteries included. Do not use rechargeable batteries.

Visual Stimulation; Auditory Stimulation; Tactile Stimulation

Ring Around Bells

594204 AT

NPI Enabling Devices & Toys
Eight colorful musical bells twirl around sounding off the musical scale as they strike a fixed mallet. This toy can be activated by any external 1/8" switch (not included, order separately). CAUTION: DO NOT TURN BELLS BY HAND. 9-Volt battery included, do not use rechargeable batteries. User's guide.

Auditory Stimulation; Gross Motor Movement; Visual Stimulation; Eye-Hand Coordination

Roly Poly Calf

594210 AT

NPI Enabling Devices & Toys
Roly Poly Calf wags her tail and nods her head when activated. (Switch required, order separately). Two (2) C batteries included, do not use rechargeable batteries.

Visual Stimulation; Tactile Stimulation; Auditory Stimulation

Saucer Switch

594240 AT

NPI Enabling Devices & Toys
The Saucer Switch is designed for individuals who are unable to control or sustain the hand or wrist movements necessary to operate traditional plate switches. Toy may need mono adapter. Do not use stereo adapter. Batteries not needed. Teacher's guide.

Gross Motor Movement

Sensi Ball Switch

594219 AT

A Enabling Devices & Toys
Textured ball switch used to activate any device. Uses mono adapter, not stereo adapter. Comes with 1/8" jack. User's guide.

Eye-Hand Coordination; Proprioception (large muscles); Tactile Stimulation; Gross Motor Movement

Shooting Stars with Music and Vibration

594233 AT

NPI Enabling Devices & Toys
Push the textured oval or add your own switch to send stars rocketing through the spaceship. The Shooting Stars will accept switches with 1/8" jack. CAUTION: MAY CAUSE SEIZURE ACTIVITY. Four (4) C batteries and one (1) 9-Volt battery included, do not use rechargeable batteries. User's guide.

Auditory Stimulation; Tactile Stimulation; Visual Stimulation

Side-Lyer Activity Center

594231 AT

NPI Enabling Devices & Toys
A small scale busy box attached to a base for use with a side-lyer. It is designed to provide sensory stimulation and cognitive activity for children with limited physical mobility. This center is designed to promote exploratory play, provide visual, auditory, and tactile stimulation and to encourage gross arm movement and eye-hand coordination. Two (2) C batteries included, do not use rechargeable batteries. User's guide.

Visual Stimulation; Gross Motor Movement; Tactile Stimulation; Eye-Hand Coordination

Side-Lyer Toy

594230 AT

NPI Enabling Devices & Toys
This multi-sensory toy is designed to stimulate and entertain a child whose mobility is limited. It provides visual and tactile stimulation, while encouraging arm movement. The brightly colored plate activates lights and vibration when lightly touched, and children love to play with the bead chains. Two (2) C batteries included, do not use rechargeable batteries. User's guide.

Eye-Hand Coordination; Gross Motor Movement; Visual Stimulation; Tactile Stimulation

Small Button Click Switch

594242 AT

NPI Enabling Devices & Toys
Button click switch provides momentary output using just 40 grams of pressure. Total size is 2-1/2" x 2-1/2". Batteries not needed. For ages 3+

Eye-Hand Coordination

Thunder Tube

594241 AT

I Enabling Devices & Toys
Wacky sound effects device. No switch or batteries needed.

Gross Motor Movement; Auditory Stimulation; Tactile Stimulation

Two Shape Switch/Music Box

594238 AT

NPI Enabling Devices & Toys
This switch is great for teaching cause and effect. Connect a device or toy to the switch and it will turn on instantly when the shapes are put into place. The switch may be used alone. When the child inserts the shapes into place, the internal music box plays a tune. Comes with a 1/8 to 1/8" cord for activation with 1/8" jacks. One (1) AA battery included, do not use rechargeable batteries. User's guide.

Auditory Stimulation; Spatial Relationships; Cognitive Development

Vehicle/Animal Sound Blocks

594260 AT

NP Achievement Products Inc.
Match front and back of vehicles and animals together to hear sounds. Three (3) AA batteries included, do not use rechargeable batteries. Contains: 1 vehicle and 1 animal. For ages 2+

Auditory Stimulation; Sequencing; Visual Perception

Vertical Plate Switch

594205 AT

NPI Enabling Devices & Toys
This switch is useful when only one side-swiping or midline movements are possible. The switch can be positioned vertically or at a 45 degree angle. No batteries required.

Gross Motor Movement

Vibrating Plate Switch

594239 AT

NPI Enabling Devices & Toys
The Vibrating Plate Switch has a large (5"x8") plate, which responds to the slightest pressure to provide vibrotactile stimulation. This unit can be used alone, or as an external switch when connected to a toy. It has suction cups to provide firm mounting to any smooth surface. Comes with 1/8 to 1/8" cord for activation with 1/8" jacks. One (1) C battery included, do not use rechargeable batteries. Adult set up needed when connecting to other toys. User's guide.

Tactile Stimulation

Adaptive Toys for Families

Wireless Tube Switch

594212 AT

A Enabling Devices & Toys

Hold the tube in a vertical position to turn on your toy. Move the tube into a horizontal position to turn off your toy. 6-Volt battery needs to be inserted in tube by parent or therapist. Star end of tube is removed to insert battery.

Two (2) AA batteries and one (1) 6-Volt battery included, do not use rechargeable batteries. Use with ages 5 and up. Teacher's guide.

Pronation/Supination of Upper
Extremity; Gross Motor Movement